FIG.1 PRIOR ART



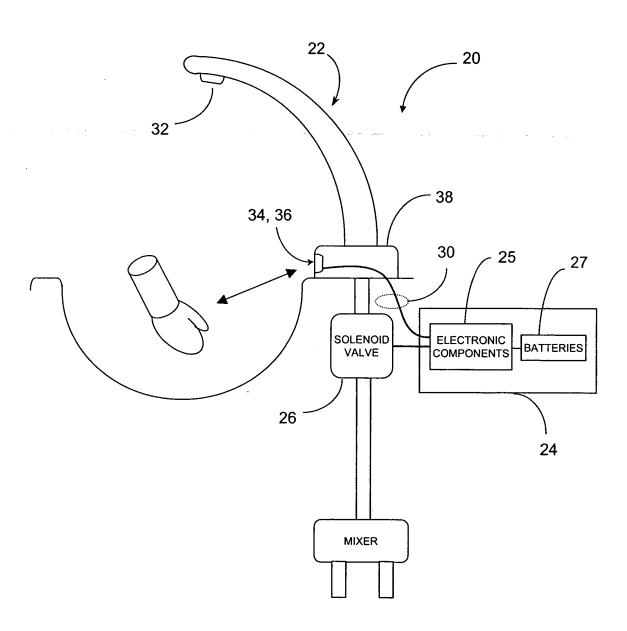




FIG. 2



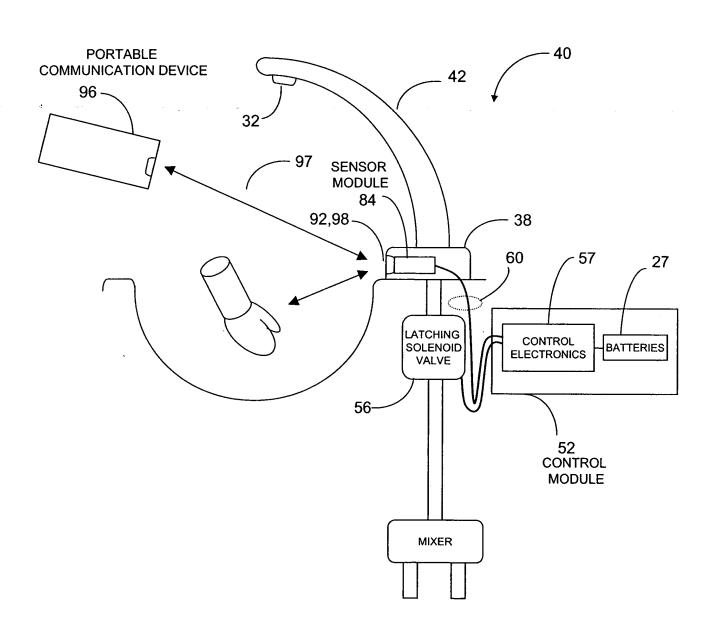

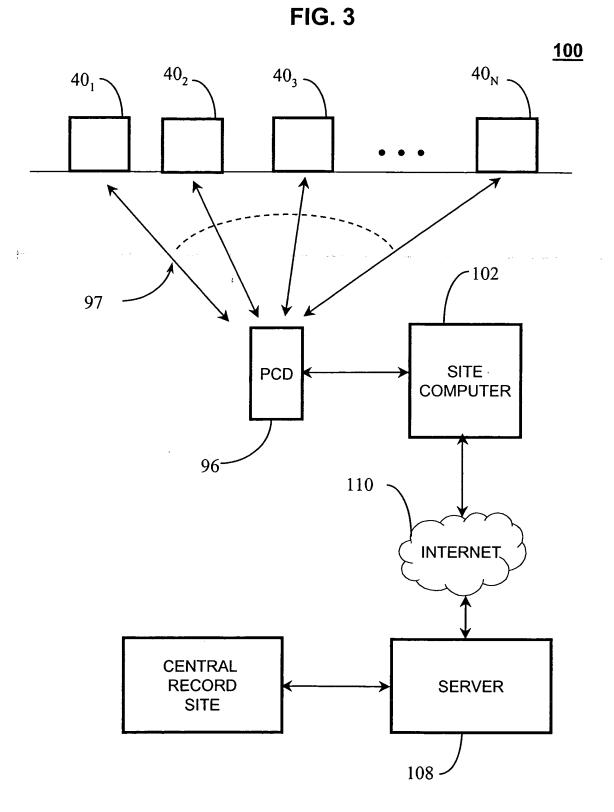



112 -FIG. 4a Synapse Commander

Get Faucet Data

Adjust Faucet

Scan For Problems

Information

Troubleshoot

Help

115 FIG. 4c Adjust

☐ Short ☐ Far Range **S** Normal ☐ Maximum

☑ Normal 🔲 Metered Mode ☐ Scrub ☐ Water Saver

0 min 3 min Other) (OK) Help.) Set

FIG. 4e

Field Replacement Parts Galileo

Mechanical Parts

570-001KJKCP Lay Spout Gooseneck Spout gnzahbjikce: Gooseneck Flange 170-202KJKCP

4" Coverplate 570-003KJKCP

8" Coverplate .570-008KJKCP 4" Cyrplate/Side-mix 550-018KJKCP

8" Cyrplate/Side-mix 570-135KJKCP

Electronics (Miscellaneous) Accessories Mechanical

(OK)

114_

FIG. 4b

Information

Review & Modify Your Data

Reference Guide

Field Replacement Parts

Accessories

Contact Synapse

Contact Chicago Faucets

Help

Ok-

FIG. 4d

GetStatus Rim Palm at Faucet

Serial # 00000000 Overall Status L'ow Battery

Power Status Dead

Power Settings Usage Location Misc Unloaded Volts 0. volts Loaded Volts 0. volts Time In Use 0 hours Replace Battery Date 1/20/03

(Help)

(Note

Next (OK)

FIG. 4f

Reference Guide

MODE DEFINITIONS

NORMAL-Unit turns off 1.5 seconds after hands are removed.

METERED-Unit stays on for 10 seconds

and then turns off.

SCRUB-Unit stays on for 60 seconds

after removing hands.

WATER SAVER-Unit stays on 5 seconds and then turns off.

Back

Next

Common Field Problems

OK

FIG. 5

